 
Installation Manual

ALT-ST20-D10








- ·Before installation, please read!
- •For the most accuracy, please use metric measurements as they were converted to imperial measurements for reference.

•The illustration is illustrated at the left hanging source.

ABOUT THE PRODUCT

- This product is hardware for vertical pocket doors in furniture, enabling slow door closing.
- The door is stored inside the cabinet.
- The door incline can be easily adjusted via a 5-stage angle retention mechanism.

Item Name Guide

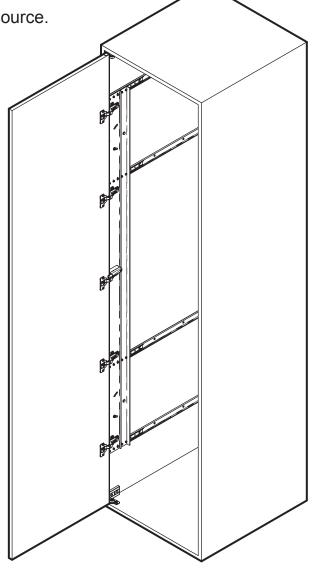

SPECIFICATION

| Туре | S | M | L | LL |
|----------------|-----------------------------------|--------------------------------|--------------------------------|------------------------------------|
| Rail Q'ty | 2 | 3 | 4 | 4 |
| Door Width | Max.600[24"] | | | |
| Door Height | 800 - 1200 [31-1/2" - 47-1/4"] | 1200 - 1600 [47-1/4" - 63"] | 1600 - 2000 [63" - 78-3/4"] | 2000 - 2400 [78-3/4" - 94-1/2"] |
| Door Thickness | 18 - 20[11/16" - 13/16"] | | | |
| Door Weight | Max. 9 kg [19.8 lbs] | Max. 15 kg [33 lbs] | Max. 20 kg [44 lbs] | Max. 20 kg [44 lbs] |





Caution () Prohibited Required





?∖ Caution

If not followed, injury or damage may result.


- Provide a cabinet that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws and tighten them securely. If the mounting strength is insufficient, the door may fall and can cause injury.
- Follow the specified dimensions, specifications, and alignment of the cabinet. Make sure that the cabinet is not warped, since it may affect the movement of the door.
- Position the handle so that the hand holding the handle does not strike the side board.
- When moving the cabinet, remove the door and re-assemble it at the site.
- This product is a part for furniture. After installation, check the function and safety of the final product.
- Make sure to check the screws for slack at regular intervals. (one month and six months from first usage and then once every year is recommended).
 - Be sure to inform users of the precautions below regarding opening and closing.
 - O Do not force the door to open past 90°. Damage may result.
 - When closing the door, pull it out until the catch clicks and then close it.
 - Repeated opening and closing may cause the inner rail to disconnect, shortening the door movement distance. Push the door fully inward or pull it fully out to correct the deviation.
- Overlay (ST20-D10) M LL Type Type Rail* AL127 C 1 2 3 4 4 16 - 28 in ALT-ST20-S ALT-ST20-M plat 1 1 1 1 ALT-ST20-I ALT-ST20-LL Connecting 2 ALT-ST20-LPS ALT-ST20-LPM 1 1 1 1 ALT-ST20-LPL ALT-ST20-LPLL Concealed 5 SCAF-7G99 3 3 2 4 Hinge **Hinge Mounting** SBAR3R 2 3 4 5 Plate Mounting 5 2 3 5 ALT-MP32 4 Plate Damper Unit 1 6 1 1 SD0S8SNG 1 **Damper Base** 7 SDARX99 1 1 1 1 Door Stopper ALT-ADS 2 2 3 3 Protector 9 2 2 2 2 ALT-ADP Catch** 10 AL127-CH 2 3 2 3 Roller 11 DU19-B4SBR 2 2 2 2 Roller bracket ALT-2V-AB 1 1 1 1 12 1 ALT-2V-BB 1 1 1 Insert Nut 13 2 SC-107-13 2 2 2 Slider 14 2 G-175 2 2 2 ALT-AB M5 Adjustment bolt 15 2 2 2 1 Bind head tapping screw 3.5×15 16 22 29 36 36 Bind head tapping screw 4×16 17 6 6 6 6 Raised countersunk head tapping screw 3.5×15 6 10 18 4 8 Hexagon flange head screw M4×6 19 20 10 15 20 Low Countersunk head screw M4×8 20 2 3 4 5 Raised countersunk head screw M4×10 21 6 9 12 15 Raised countersunk head screw M4×14 22 1 1 1 1 Hex key 23 1 1 1 1

Do not cut rails. Rail sizes (inches) include 16, 19, 22, 24, and 28. ** This catch holds the door at the pulled-out position. Be sure to mount it on the uppermost and lower slide rails (For details, see P.4 3).

1


Surface Mount

■ If Bottom Mount Bracket - Roller Bracket 12

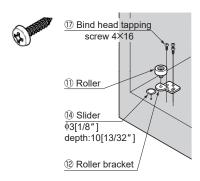

Position Roller Bracket as shown below:


Top View of Cabinet

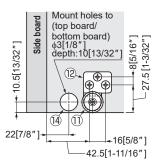

Front of Cabinet


Flush Mount

Roller Guide Only

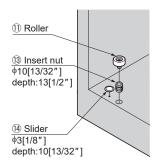


Position Insert Nut as shown below:

Top View of Cabinet

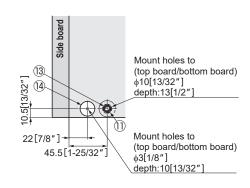

Side Mount

■ Side Board Installation

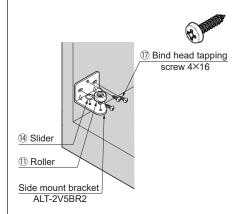


NOTE: Optional Side Mounting Bracket Sold Separately


> Requires a larger reveal: Top 15[19/32"] Bottom 15[19/32"]

Go to: "Step 2: Side Board Installation"


2 Side Board Installation

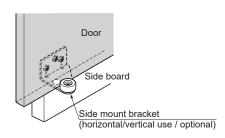


| Item Name | Туре | | |
|------------|--------------------------|--|--|
| ALT-2V5BR1 | Lower right + upper left | | |
| ALT-2V5BR2 | Upper right + lower left | | |

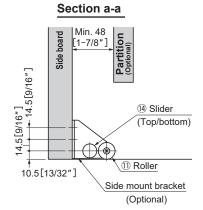

Note: Slider should always be installed towards front of the cabinet.

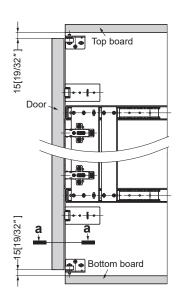




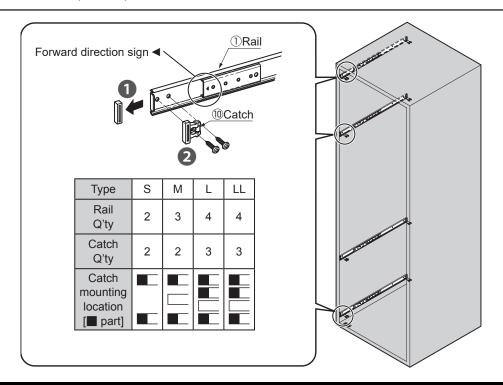



See next page for Rail Placement Drawings


Install Slide Rails & Guide Roller 1/2(Fix the only top slide rail and temporarily fix all other slide rails).

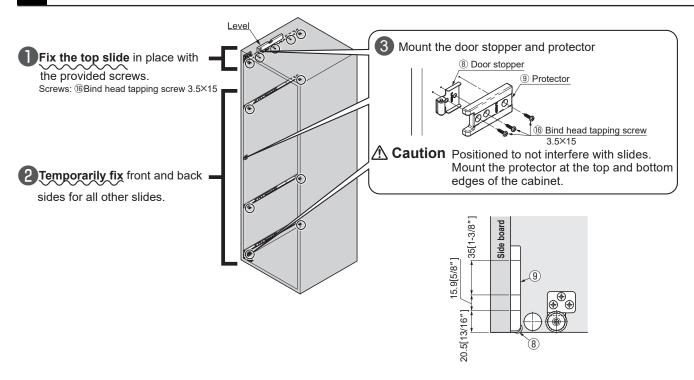



SUGATSUNE

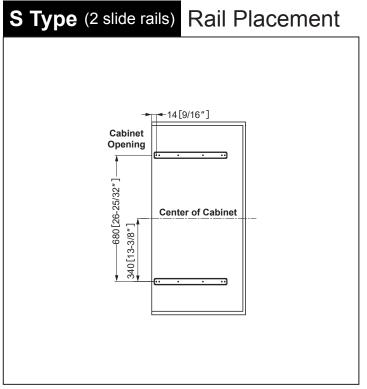


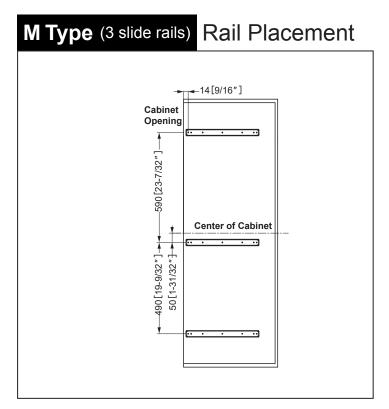

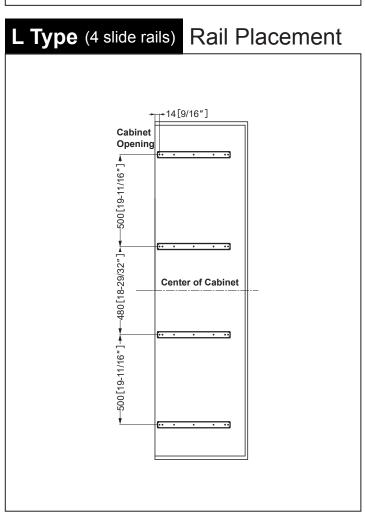

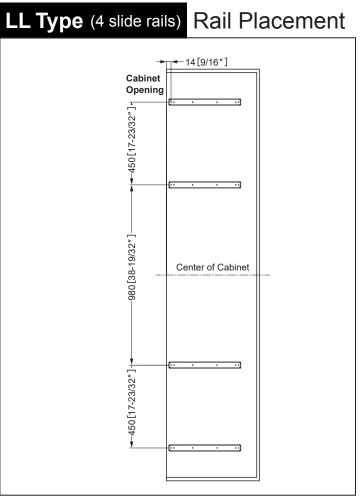


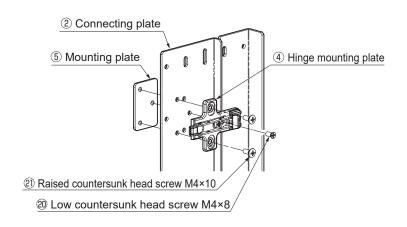

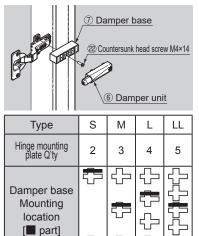


Mount the damper base and damper unit in the specified position.


Mount Assembled Connecting Bar to Slide Rails

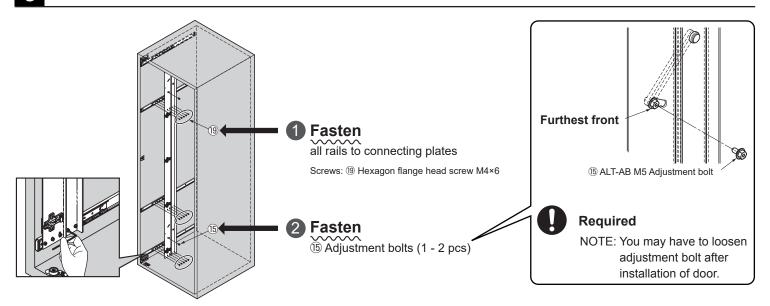


Fixing all other slide rails 2/2

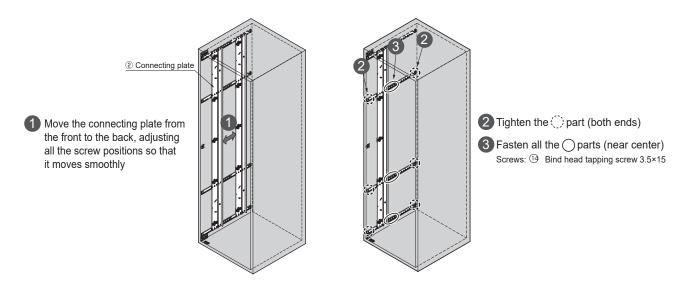





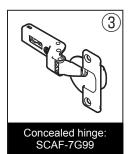




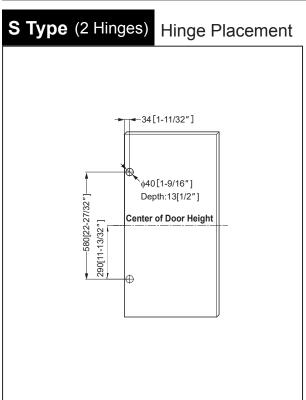

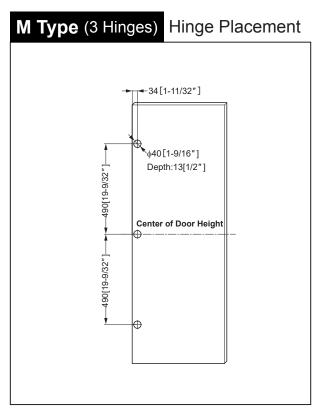


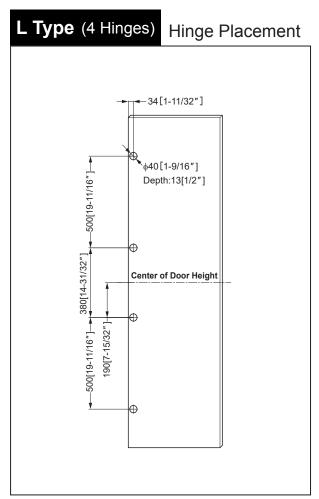


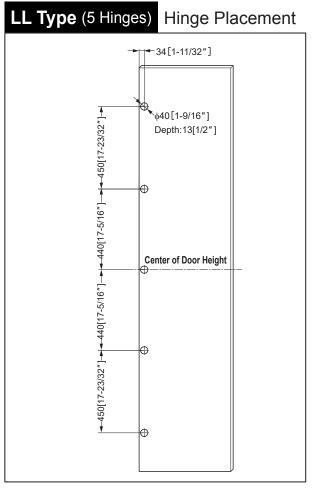




Simply line up hinge over the mounting plate and press down

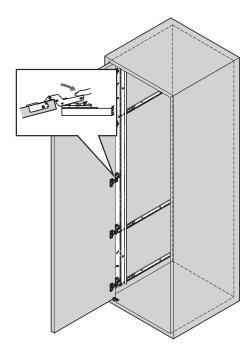


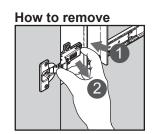


Adjusting The Angle of the Door

- Loosen the screws fixing the connecting plate and the adjustment bolts. (After tightening, loosen 90° 180°)
- Lift the door and shift the adjustment bolt backward one level at a time, to make the door and connecting plate vertical.
 5-stage adjustment is possible in accordance with the door weight.
 *When there are adjustment bolts at top and bottom, align their positions.

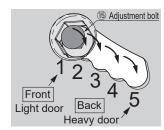


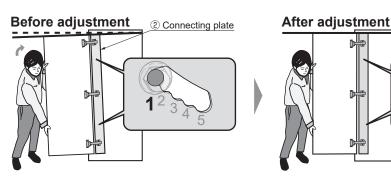

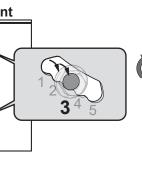



3 Tighten all the screws once the door is in the desired position.



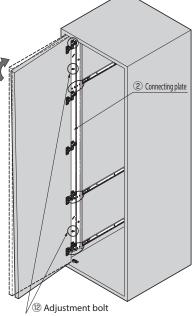




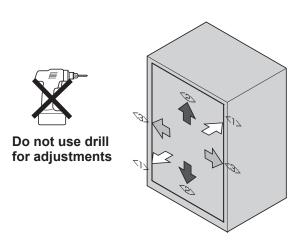

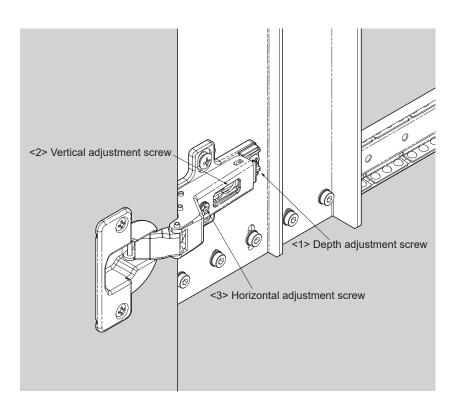

Closing speed adjustment (3 stages)

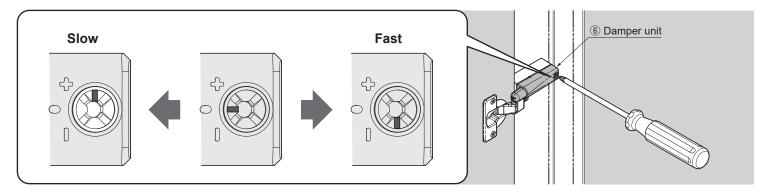

SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN Phone: +81 3 3866 2260 E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LIMITED Reading, UK Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812 900 E-mail:sales@sugatsune.eu

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Chicago, USA Phone: +1 630 317 7072

E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC. Montreal, CANADA
Phone: +1 514 312 5267
E-mail:support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn **Guangzhou, CHINA** Phone: +86 20 6639 3554

E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD. Incheon, KOREA
Phone: +82 32 220 0603
E-mail:sales@sugatsune-korea.co.kr

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

2024.04 1563-4e

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 9867299597

E-mail:sales@sugatsune.in Delhi, INDIA Phone: +91 9867299597 +91 11 45093636

E-mail:sales@sugatsune.in

