LAMP. DIS-M SHUTTER SYSTEM Installation Manual (Surface Mount)

Thank you for using our product. Before installation, please read this manual thoroughly to ensure correct installation.

Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

This product is a shutter system for cabinets.
 20 mm of bending radius adds a sleek look to the cabinet.



FOR YOUR SAFETY AND CORRECT INSTALLATION

Meaning of symbols

Warning Caution Prohibited Required

Caution If not followed injury or damage may result.

When cutting the slats, remove burrs on the edges.

Remove any dirt or wooden chips from the guide tracks before the installation of the shutter profiles.

Do not lean on the shutter profiles. It may cause the slats to break.

TYPES OF CABINET / DIMENSIONS

(Make the cabinet disassemblable for maintenance.)

	Vertical	Horizontal	Horizontal - Double opening	
Width Height Depth	300 - 1200 mm 300 - 900 mm Min. 330 mm	300 - 900 mm 100 - 1200 mm Min. 330 mm	600 - 1800 mm 100 - 200 mm Min. 330 mm	



SCREWS NEEDED FOR ASSEMBLY

	Metal cabinet		Wooden cabinet		Common
	Vertical,	Horizontal	Vertical,	Horizontal	Vertical
	Horizontal	(Double opening)	Horizontal	(Double opening)	(for spring plate ⁶)
Pan head screw M4 $ imes$ 10	8	16	-	-	2
Bind head tapping screw \$4	-	-	8	16	-
Countersunk head wood screw 2.7 \times 13	2	2	2	2	_

THE OTHER ITEMS BE PREPAIRED

•Tape(Part No.D15-020)

•Grease(Part No.D15-025)

COMPONENT PARTS

① Slat DIS-001-1200 1200 mm	(2) Storage guide DIS-004R (Right) DIS-004L(Left)	3 Guiding rail (surface mount) DIS-05-860 860 mm	④ End-slat DIS-007-1200 1200 mm		
5 End-slider DIS-009	6 Spring plate (vertical type only) DIS-012	(7) Balance spring (vertical type only) Build to Order			
	a file				


OPTIONAL PARTS

(8) Front cover DIS-006-1200 1200 mm	Cam lock DIS-022 DIS-010	Counter plate DIS-011	①Center stopper (surface mount) (for double opening) DIS-017	
12 Counter plate (for double opening) DIS-021	13 Middle slat DIS-019 1198 mm	Image: Weight of the second state o	(15)Storage cover (surface mount) DIS-024	
(ⓑ Magnet catch (for wooden vertical cabinet, W≦600) IND10-WT	⑦Magnet catch (for metal vertical cabinet, W≤600) MC-FP5W	18 Middle bracket (for vertical cabinet, W≦600) DIS-024		



<Optional part>




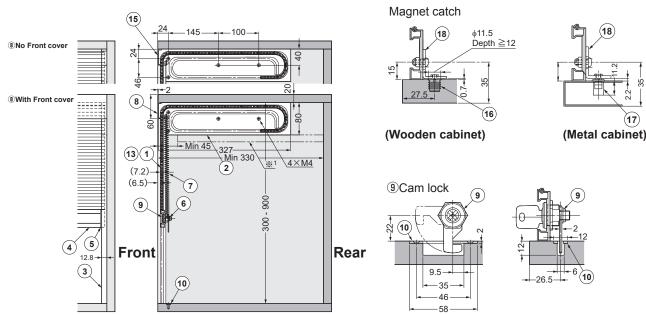

*1 When storing unstable goods in a horizontal cabinet, it is recommended to place a middle board to avoid interference between the slats and the stored goods.


PROCESS DIMENSIONS FOR SLATS

	Vertical		Horizontal		Horizontal - Double opening	
Parts name	Quantity (rounded up)	length	Quantity (rounded up)	length	Quantity (rounded up)	length
Slat	W<600 H/40 W≧600 H/48	W-10	H<600 W/40 H≧600 W/48	H-10	H<600 {(W/2)/40}×2 H≧600 {(W/2)/48}×2	H-10
Storage guide	2	H-40	2	W-40	2 2	(₩/2)-40 (₩/2)-41.5 ※ ²
End-slat	1	W-30	1	H-30	2	H-30
OPTIONS						
Front cover	1 (W<600 only)	W	1 (H<600 only)	н	2 (H<600 only)	Н
Middle slat	H/48 (W≧600 only)	W-12	W/48 (H≧600 only)	H-12	{(W/2)/48} ×2 (H≧600 only)	H-12
Handhold slat	1	W-12	1	H-12	2	H-12

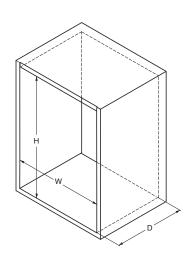


%² For horizontal type with double doors, one side of guiding rail is cut 1.5mm shorter to insert center stopper.

INSTALLATION PROCEDURE

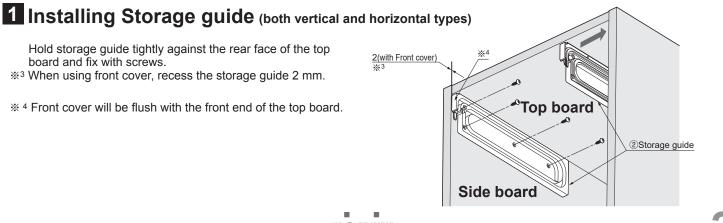


2 Fixing Magnet catch (vertical type only)

When the width is 600 mm or less, use a magnet catch and middle bracket. For wooden cabinets, drill a hole at a position of a guarter of the opening width.

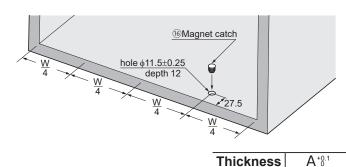


For metal cabinets, drill a hole at a position of a quarter of the opening width, as shown in the right figure.

3 Processing and Assembling End-slat (both vertical and horizontal types)

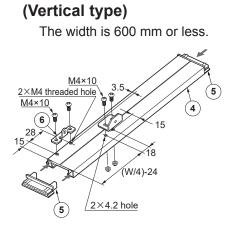


Drill threaded holes to fix the Spring plate to the end slat.

 Using an optional part cam lock (Both vertical and horizontal types) The width is 600 mm or more.

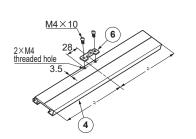

When the width is 600 mm or more, drill threaded holes in the middle of the end slat to fix the spring plate.

(Horizontal type)

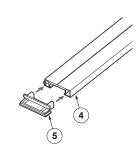

0.8

1.0

1.2

1.4

1.6

1.8

2.0

34.1

34.1

34.5

34.5


35.0

35.5


36.5

Insert the end slider into the end slat without leaving a gap. Refer to the figure and pay attention to the direction.

(Counter plate for horizontal type double door)

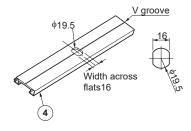

Make a hole with V-groove as the center.

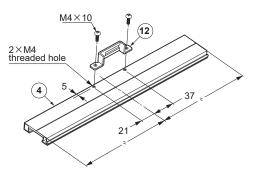

Pay attention to the direction of the end-slat and the positional relation between the end-slat and counter plate.




4 Assembling slat (both vertical and horizontal types)

Apply versatile elastic adhesive and tape to assemble the slats.

- Apply adhesive Every 100-150 mm just for preventing lateral displacement. Proceed to the next step after the adhesive hardens completely.
- When using a handhold slat, be sure to insert between slats ①, do not connect with the middle slat ③.

The length of the handhold slat 0 should be 2 mm shorter than the slat 0 .

Each end needs to be 1 mm retracted. % ⁵

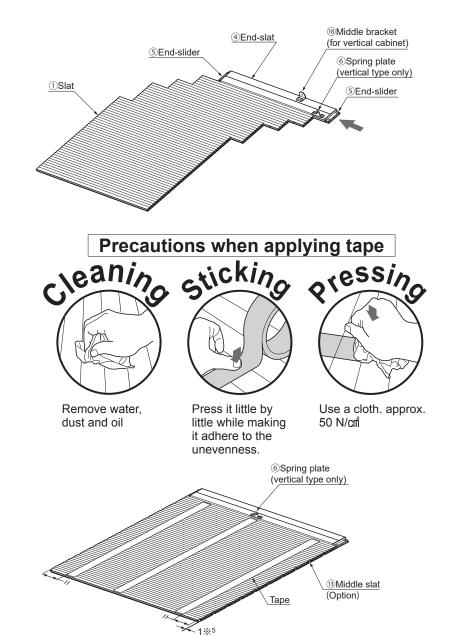

Combine Middle slat between slats for vertical type with width 600 mm or more (Horizontal type with height 600 mm or more)


72 hours after applying the adhesive, apply tape on the backside of the slats to prevent lateral displacement.

• The length of middle slat 3 should be 2 mm shorter than slat 1 . Each end needs to be 1 mm retracted. \divideontimes ⁵

5 Installing into a cabinet (both vertical and horizontal types)

Slide assembled slat in the Storage guide. After that, roll up the slat to the top.


Apply provided grease on the groove of the storage guide. Smooth movement can be maintained by periodically applying grease.

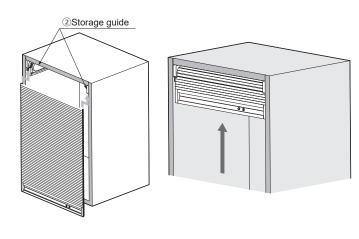


6 Attaching Balance spring (vertical type only)

Hook balance spring to spring plate. Use one spring for the width 600mm or less, two springs for the width 600mm or more.

% ⁶ Balance spring will be made to order, since it needs to be fit with the volume of the shutter.

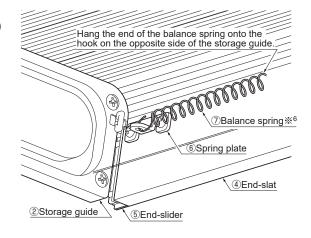

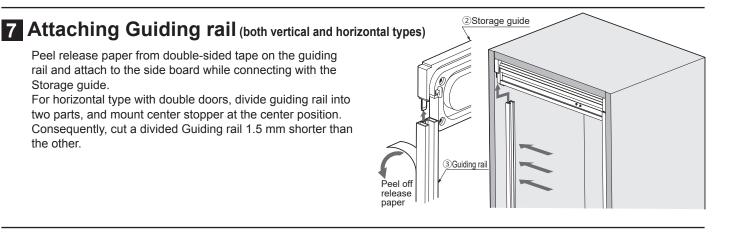

8 Installing Front cover, Storage cover (optional parts)

Vertical type with width 600 mm or more (Horizontal type with height 600 mm or more)

Peel release paper from double-sided tape on front cover (9), put to the end of surface of top board paying attention to pawls the for fitting to storage guide 2.

Vertical type with width 600 mm or more (Horizontal type with height 600 mm or more)


Peel off double-sided tapes attached to storage cover (15) and put both of them as shown in the right figure.


Caution ·

If the width or the height exceeds 600 mm, the slats may warp and interfere with the front cover.

Precautions for use

When closing, hold both ends of the slat. If you hold the slat with one hand only, the slats will lean and the movement will not be smooth.

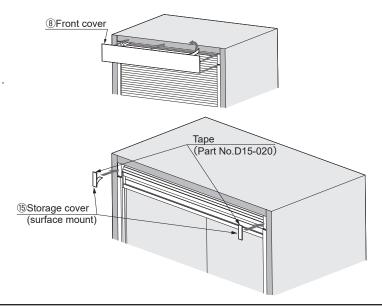

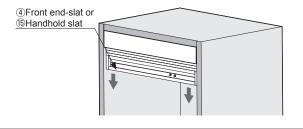

 SUGATSUNE KOGYO CO.,LTD
 SUGATSUNE SHANGHAI Co., LTD

 Tokyo, JAPAN
 Shanghai, CHINA

 Phone: +81 (0)3 3866 2260
 E-mail:export@sugatsune.co.jp
 Phone: +86 21 3632 1858
 E-mail:lamp@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LTD

E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA E-mail:lamp@sugatsune.com.cn

SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Chicago, USA Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

Reading, UK Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk Phone: +86 20 6639 3552 SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

SUGATSUNE CANADA, INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900 E-mail:sales@sugatsune.eu ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

2020.12 0797-3