LAMP. FD30EX SLIDING DOOR SYSTEM Installation Manual (Outset Type with Two-way soft close)

Part No : FD30EXDHCP-AK

Thank you for using our product. Before installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- This product is a overlay sliding door system for indoor use.
- The door closes in 2 soft motion steps; first slow, then fast, and opens with 1 step soft motion.
- The door can be installed without the use of tools.

SPECIFICATIONS

| Door height | Max. 2400 mm | | |
|-------------------------|---------------------------|--|--|
| Door width | 590 – 1000 mm | | |
| Min. Door thickness | 30 – 36 mm | | |
| Max. Door weight | 30 kg %1 | | |
| Height adjustment range | 3mm upward, 4 mm downward | | |
| Adjustable height range | ± 2 mm | | |

• The closing speed of the soft closing type door may change due to ambient temperature, operating method or installation quality.

- · Recommended ambient temperature range is 5 to 40°C.
- %¹If a light weight door is applied, you may feel the resistance of the soft closer when opening the door.

FOR YOUR SAFE WORK AND CORRECT INSTALLATION

Meaning of symbols

Warning Caution Prohibited Required

🕺 WARNING: If not followed, death or serious injury may result.

This product should be installed by a qualified person in accordance with this manual. If it is not installed correctly, the door may fall and cause injury.

Provide a frame that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws and tighten them securely. If the mounting strength is insufficient, the door may fall and cause injury.

 \bigotimes Do not use this product for any other purpose, or with doors that are outside the specifications of this manual.

 \bigotimes Do not disassemble or modify any parts other than those described in this document.


l Caution: If not followed, injury or damage may result.

Follow the specified dimensions, specifications, and alignment of the door and frame. Warping, tilting or twisting of the frame or door may cause failure.

If cutting any parts, make sure to remove any burrs before installation. Also check the upper track for any left-over burrs or scraps and remove these.

This product is a part for architectural fittings. After installation, please check the function and safety of the final product. Please inform the end user how to use the product safely.


Make sure to check the screws for slack at regular intervals (one month from first usage, half a year, and then one time every year is recommended).

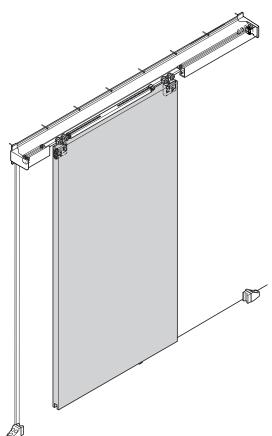




COMPONENT PARTS


| No. | 1 | 2 | 3 | (4) | 5 | 6 | \overline{O} |
|----------------|-------------|--------------------------|--|--------------------|--|--------------|---|
| Name | Upper track | Soft closer (two-way) | Upper roller | Trigger (with nit) | Floor guide | Bumper block | Door stopper (floor) |
| Item No. | FD30-TRA | FD30EX-WRH-DSC | FD30-WRH-N | FD30-HATG | FD30-HBG | FD30-HBB | FD30-HTKY |
| Item | | | Accessory screw: Pan head tapping screw 3.5×30······3 pcs | | Accessory screw: Countersunk head tapping screw 3.5×30······4 pcs | | Accessory screw: Bind head tapping screw 4×30······3 pcs |
| Single sliding | 1 pc | 1 pc | 1 pc | 2 pcs/set | 1 pc | 2 pcs | 2 pcs |

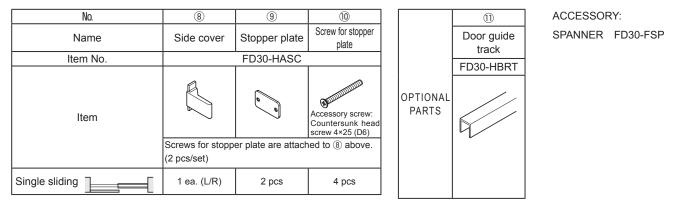

INSTALLATION DRAWING (EXAMPLE)

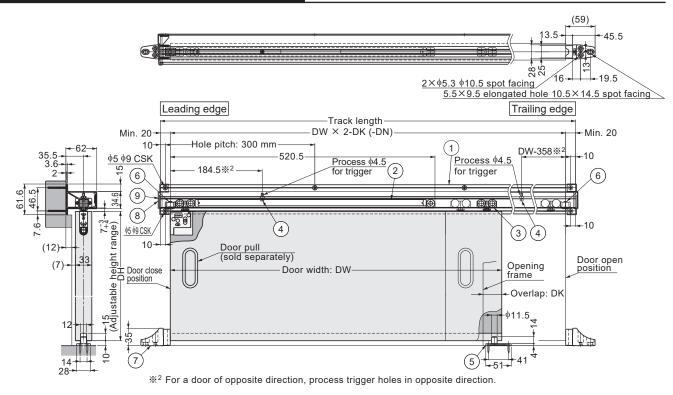

Door process dimensions

 

 $\%^3$ When using door guide track


12 Door guide track




1 Cutting and Hole Drilling on Upper Track


Cutting

Hole processing

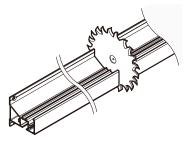


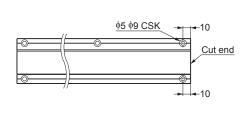


Processing holes for trigger

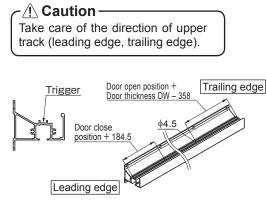

2 Mounting Parts on Door

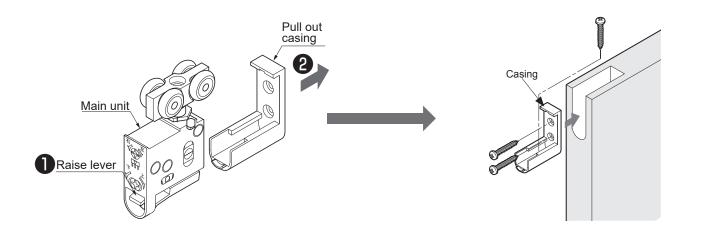


3 Verification Before Installing Soft Closer

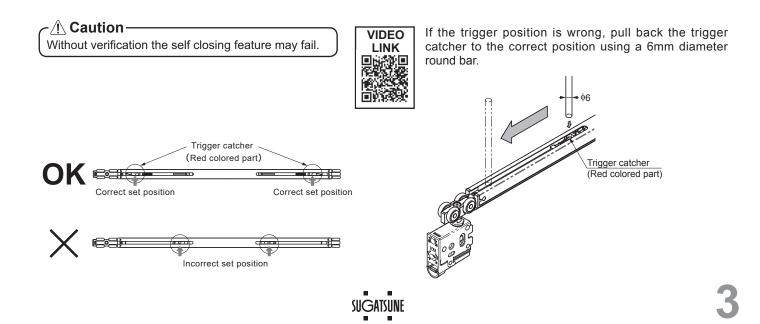

4 Inserting Parts into Upper Track


Insert the parts in order from 1 to 4 with care of direction.

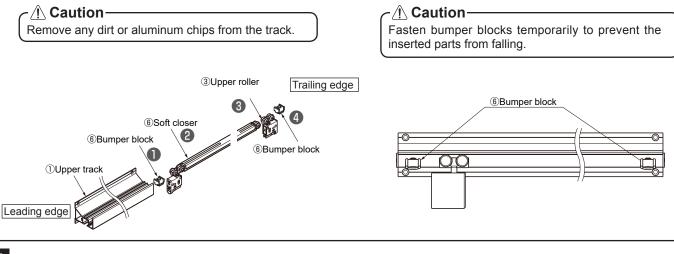

5 Mounting of Upper Track


- 🕂 Caution -


Be careful not to overtighten the screws and screw heads protruding on upper track.
 N It may cause deformation of track or damage of soft closer.

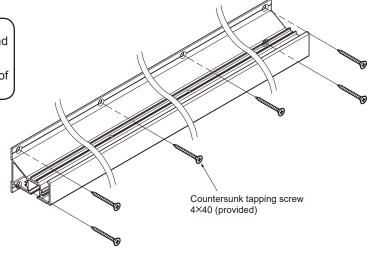


6 Fastening of Trigger

Fasten triggers to the hole made during procedure **1** with the provided nuts.

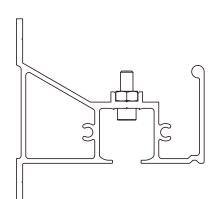

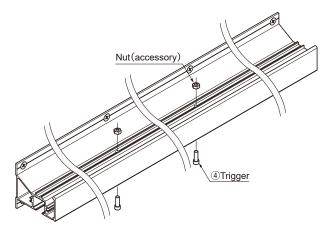

7 Assembly of Side Cover

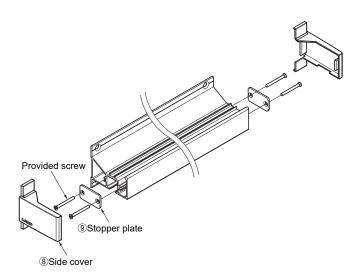


8 Mounting of Floor Guide

Position floor guide just below the center of the upper track.



Position the floor guide so that its protruding part stays under the door when it is opened or closed.


Fasten the four countersunk holes with provided screws.

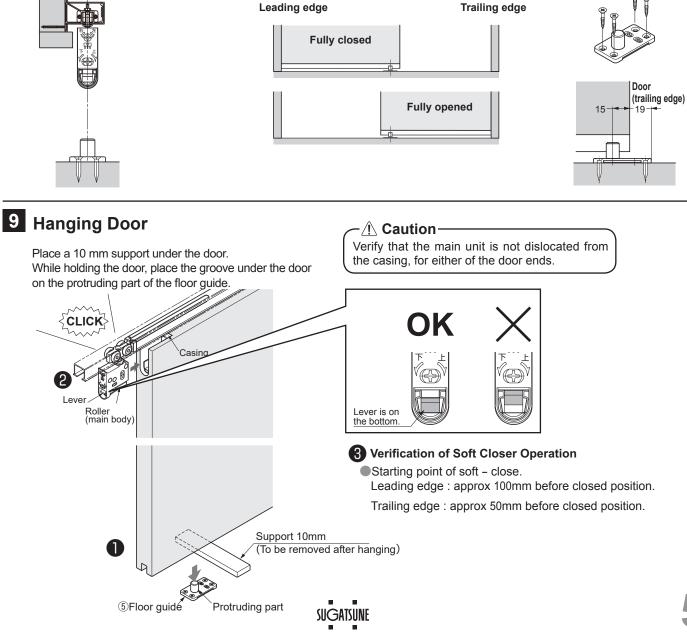

Fastening of Bumper Block Adjust position of bumper block in the track such that the door stops at the correct positions for both ends. Leading edge Trailing edge Bumper Door closed Door closed


11 Adjusting the Door Position

Adjust the door parallel to the upper track with 6-13 mm of clearance between the door and floor.

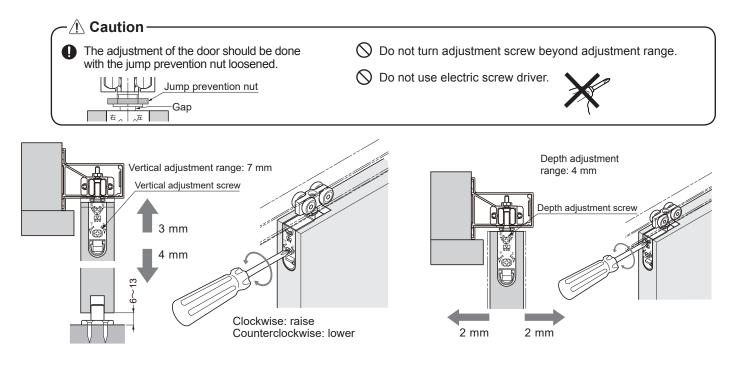

12 Adjusting the floor guide

If the door movement is not smooth, remove the door, then adjust the floor guide forwards or backwards.

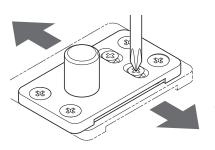


Adjustment range : \pm 2mm




13 Fastening the Jump Prevention Nut

The jump prevention nut is on the hanger bolt of the upper roller. Tighten the nut with the provided spanner until it contacts the soft closer.

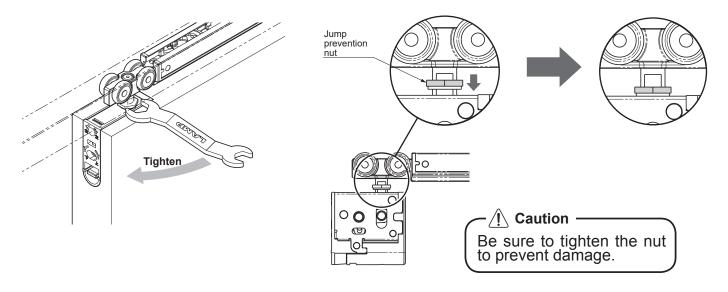

14 Mounting of door stopper (floor)

Fasten door stoppers at the positions where the door stops.

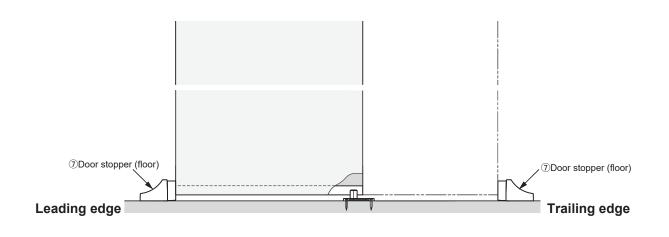


APPENDIX How to remove door

Use a 10mm support under the door.

Then pull out the upper roller main unit from the door while raising the lever.

It will be easier if you slide the hanger bolt with a spanner.

| Caution———— | | |
|--------------------------------------|--|--|
| Be careful not to let the door fall. | | |

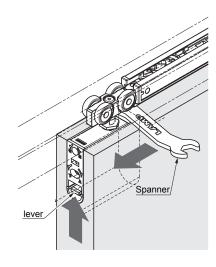



Clean the inside of the track. Check the upper and lower space of the door. If necessary, correct the space.

TROUBLESHOOTING

| Trouble | Check Point | Solution |
|---------------------------------|---|--|
| Door stops during soft closing | Check if door bottom contacts the floor. | Verify that the track mounting screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 6 - 13 mm. |
| | Check if the upper track is set horizontally. | Using a level gauge, reset the upper track horizontally. |
| | Check if mohair seal is installed. | Reduce the friction between the mohair seal and door. |
| The door doesn't close | Check if trigger is installed. | Install trigger to specified position. |
| softly | Check if door is closed by excessive force. | Do not close door by excessive force as it may damage the soft closer. |
| | The position of the trigger catcher in page 3 section 1 . [3] may become dislocated. (It is hidden as installed in upper track.) | Remove the door and the upper track, then check the status of the trigger catcher in section \blacksquare - [3] . |
| Abnormal noise during operation | Check if door bottom contacts the floor or floor guide. | Verify that the track mounting screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 6 - 13 mm. |
| | Check if door touches adjacent parts. | Adjust the door depth position to avoid contact with other objects or adjust the position of floor guide. |
| | Check track rollers for aluminum dust. | Remove the track, then pull out and clean the roller. |
| Heavy door operation | Check if door bottom contacts the floor or floor guide. | Verify that the track fixing screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 6 - 13 mm. |
| | Check if door touches adjacent parts. | Adjust the door depth position to avoid contact with other objects or adjust the position of floor guide. |
| Door starts to move. | Check if the upper track is set horizontally. | Using a level gauge, reset the upper track horizontally. |

 SUGATSUNE KOGYO CO.,LTD
 SUGATSUNE SHANGHAI Co., LTD

 Tokyo, JAPAN
 Shanghai, CHINA

 Phone: +81 (0)3 3866 2260
 E-mail:export@sugatsune.co.jp
 Phone: +86 21 3632 1858
 E-mail:lamp@sugatsune.co.jp
 SUGATSUNE KOGYO (UK) LTD Reading, UK Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA Phone: +86 20 6639 3552

E-mail:lamp@sugatsune.com.cn

SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Illinois, USA Phone: +1 630 317 7072 E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC.

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

