### LAMD

# HES INSTALLATION MANUAL FOR HES3D-E160 CONCEALED HINGE


Thank you for using our product. Before installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

## **ABOUT THE PRODUCT**

- This product is a concealed the hinge for indoor use, that is recessed into the door and doorframe.
- Three dimentional adjustment function allows vertical, horizontal, and depth adjustment.

## DOOR SPECIFICATION

Min. Door thickness	36 mm
Max. Door weight	55 kg per 2 hinges, 70 kg per 3 hinges
Max. Door size	Width: 900 mm, Height: 2400 mm

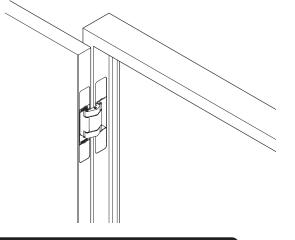

## **COMPONENT PARTS (PER BOX)**

· Concealed hinge

Screw cover 4 pcs×2 bags

2 pcs

Template1 pc

Countersunk head tapping screw

 $5 \times 25$  8 pcs  $\times 2$  bags

· Hex Key 4mm 1 pc

## FOR YOUR SAFETY AND CORRECT INSTALLATION

### Meaning of symbols








## Caution: If not followed, injury or damage may result.

- Provide a frame that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws and tighten them securely. If the mounting strength is insufficient, the door may fall and cause injury.
- O Do not use this product for any other purpose, or with doors that are outside the specifications of this manual.
- Use in conjunction with a door closer is not recommended. For soft-close option, we recommend Sugatsune LDD-V or LDD-S door damper.
- Follow the specified dimensions, specifications, and alignment of the door and frame. Warping, tilting or twisting of the frame or door may cause failure.
- This product is a part for architectural fittings. After installation, please check the function and safety of the final product. Please inform the end user how to use the product safely.
- Make sure to check the screws for slack at regular intervals (one month from first usage, half a year, and then one time every year is recommended).

## **INSTALLATION DRAWING (EXAMPLE)**


## **CUT OUT DRAWING FOR DOOR AND DOORFRAME**

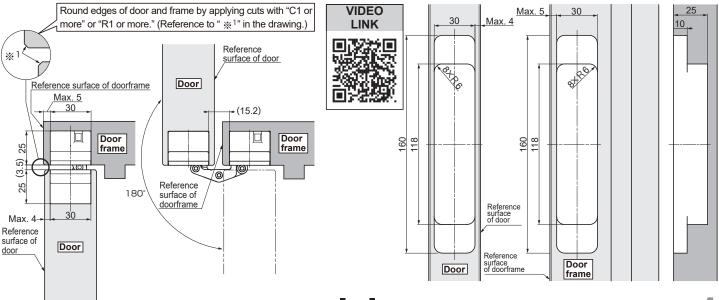

## 1 Disassembly of Hinge

## Screw cover Vertical adjustment/fastening screw Loosen this screw Vertical adjustment to disassemble (fastening) screw Hinge body Base frame

## Installing Hinge to Door and Door frame

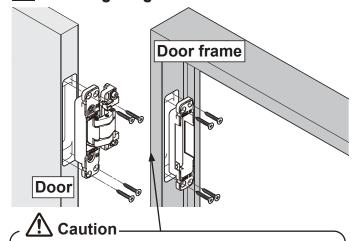


Before installing base frame into doorframe, check that it is oriented correctly. If the orientation is incorrect, the door

3 Hanging Door

Door

Door frame

 Vertical adjustment /fastening screw



cannot be installed.

[2] Hang the hinge body on the base frame. (Provisional holding state).


## Caution

Do not move the door at this stage as it may fall off.

**VIDEO** LINK

[3] While supporting the door, quickly tighten and secure the up and down adjustment screws to the position shown on the left.

ADJUSTING DOOR POSITION \* The arrows should point in the direction of adjustment when the door is closed.

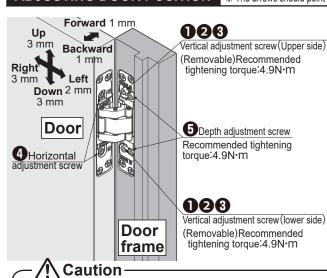

1 — 6 is the order of adjustment. Please put a supporting spacer under the door when adjusting it. There are two adjustment screws on one

### Vertical adjustment

- 1 Loosen the adjusting screw one turn.
- 2 Lifted the door to the correct height.
- 3 Finally, secure the adjusting screw.


### Horizontal adjustment

4 Rotate the adjustment screw to the correct position.

### Depth adjustment

**5** Loosen the adjusting screw one turn and secure it in the optimum position.

## Attaching the Screw Cover

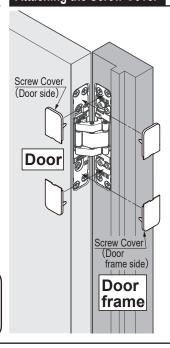

When adjusting the horizontal position, turn the two screws a little, by the same amount. The hinge may be broken if you keep turning one screw only. If you turn the adjustment screw to the right beyond the adjustment range, the parts will protrude, and the cover won't fit, and if you turn it further, the door will come off.

Do not remove the depth adjustment screw. The door may fall and cause injury.

SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN Phone: +81 3 3866 2260 E-mail:export@sugatsune.co.jp

# SUGATSUNE KOGYO (UK) LIMITED Reading, UK Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812 900 E-mail:sales@sugatsune.eu

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Chicago, USA Phone: +1 630 317 7072 E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC. Montreal, CANADA Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA Phone: +86 20 6639 3554 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD. Incheon, KOREA
Phone: +82 32 220 0603
E-mail:sales@sugatsune-korea.co.kr

# SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 9867299597 E-mail:sales@sugatsune.in

**Delhi, INDIA** Phone: +91 9867299597

+91 11 45093636 E-mail:sales@sugatsune.in