


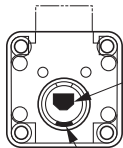


1071 型



1111 型



1101 型



1271 型



1281 型



❗ [シリンダーとハウジングの装着作業]  
凹部 (▲) と溝 A が右上図の向きであることを確認。違う場合は凹部 (▲) を回転。(下図参照)

凹部 (▲)

溝 A (一番深い溝)


1141 型



1531 型



1251 型



1201 型



1241 型

向きを合わせ、  
内筒を挿入