


SUGATSUNE

1071 型




1111 型

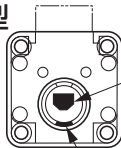


凹部 (▲)

溝 A (一番深い溝)

1101 型



1271 型





1281 型



● [シリンダーとハウジングの装着作業]

凹部 (▲) と溝 A が右上図の向きであることを確認。違う場合は凹部 (▲) を回転。(下図参照)

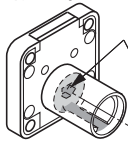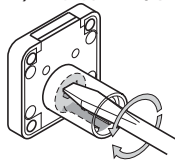

向きを合わせ、  
内筒を挿入

1141 型




1531 型



1251 型



1201 型

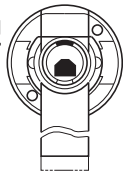

1241 型

