
LAMP. XL-GC09-CR Magnetic Catch – Installation instructions

Thank you for purchasing the XL-GC09-CR Magnetic Catch . In order to insure the best possible installation, we recommend that you read the following instructions closely. Standard warranty is 1 year from shipment time. Sugatsune responsibility is limited to the replacement of a defective part and will in no way extend to the full assembly.


Specifications

- ■The XL-GC09 magnetic catch can be used with either a glass or wooden top cabinet:
 - · Glass cabinet top: when using a hinge other than the XL-GC04, ensure that distance %2 shown in the drawing below is respected
 - · Wooden cabinet top: use of the top cover is not necessary. It is also possible to use an inset hinge other than XL-GC04.
- Glass thickness: 5, 6 and 8 mm.
- Magnetic force of the catch is 14.7N (1.5kgf). There may be slight magnetic force difference between one magnet and another.
- Please use tempered glass and ask a professional for the glass cutout.

XL-GC09-CR Parts List

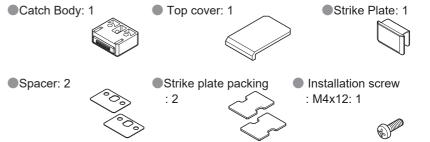



Installation drawing

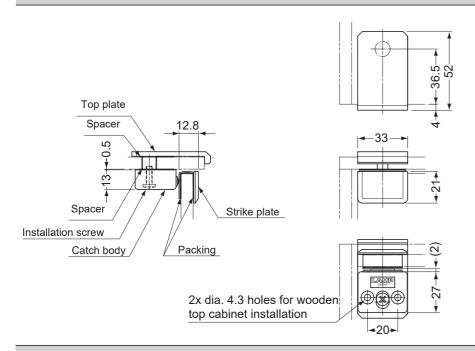


Installation for glass cabinet top

Right hand opening installation shown. Left hand opening installation is symmetrically opposite

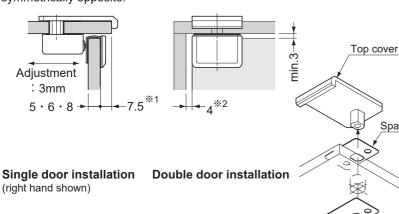

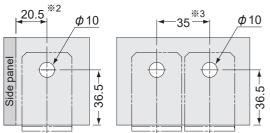

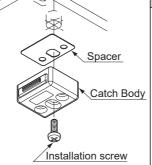

Spacer

Insert through the center hole and tighten after adjusting the position of the catch body


- When using an inset hinge other that XL-GC04, ensure that the backset is 7.5mm.
- Dimension when using XL-GC04 hinge (not included).
- Dimension when using XL-GC01 lock set (not included)

Strike plate installation


For 5 and 6mm glass

(use 2 strike plate packings)


(1) Cut the central, narrower part of only one of the strike plate packing



(2)Remove tape cover and affix each half the cut packing on either side of the glass as per below dimensions.




(3)Remove tape cover and affix the remaining uncut packing on top of the first packing as shown below.

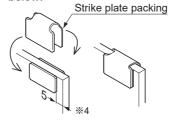

For 8mm glass


(use 2 strike plate packing)

1 Remove tape cover and affix the strike plate packing as per dimensions below.



Strike plate

Line up the side of the strike plate with the edge of the door and

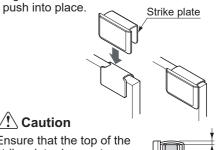




Ensure that the top of the strike plate does not overlap more than 2.5mm from the top of the door.




Distance necessary in order for the side of the strike plate to line up properly with the side of the door.

Installation for wooden cabinet top

Right hand opening installation shown. Left hand opening installation is symmetrically

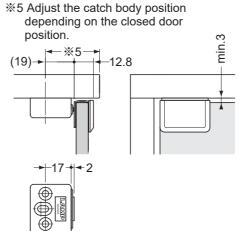

wooden cabinet top

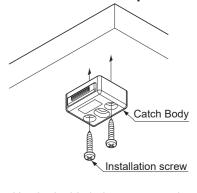

Use both side holes to secure the body catch. Size 4 screws (not included) are necessary

SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN Phone: +81 3 3866 2260

E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LIMITED Reading, UK

Reading, UK Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.ul

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812 900 E-mail:sales@sugatsune.eu

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373

E-mail:sales@sugatsune.com

Chicago, USA Phone: +1 630 317 7072 mail:sales@sugatsune.com

SUGATSUNE CANADA, INC. Montreal, CANADA

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA Phone: +86 21 3632 1858

E-mail:lamp@sugatsune.com.cn **Guangzhou, CHINA** Phone: +86 20 6639 3554 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD. Incheon, KOREA Phone: +82 32 220 0603

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 9867299597 E-mail:sales@sugatsune.in Delhi, INDIA

Phone: +91 9867299597 +91 11 45093636 E-mail:sales@sugatsune.in