

Installation Manual

FD30SP SLIDING DOOR SYSTEM

LAMP®

Outset Type with Two-way soft close

Part No : F30SPDHCP-AK

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- This is a parts set for a sliding door system for residential & commercial use.
- Built in soft closer enables two-way soft closing movement in both direction.
- The door can be installed without the use of tools.


SPECIFICATIONS

Max. Door height	2400 mm
Door width	590 – 1000 mm
Min. Door thickness	30 – 36 mm
Max. Door weight	30 kg ※ ¹
Vertical adjustment	± 3 mm
Front-rear adjustment	± 2 mm

The closing speed of the soft closing type door may change depending on the ambient temperature, operating method or installation quality.

· Recommended ambient temperature range is 5 to 40°C.

※¹ If a light weight door is applied, you may feel the resistance of the soft closer when opening the door. (Recommended at least 10kg)

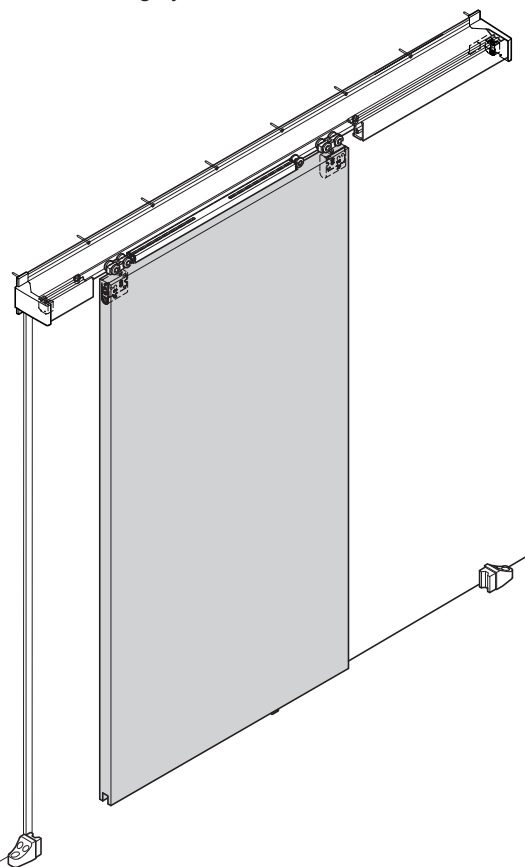

FOR YOUR SAFETY AND CORRECT INSTALLATION



Warning
Caution



Prohibited



Required

WARNING: If not followed, death or serious injury may result.



- This product should be installed by a qualified person in accordance with this manual. If it is not installed correctly, the door may fall and cause injury.
- Provide a frame that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws and tighten them securely. If the mounting strength is insufficient, the door may fall and cause injury.









- Do not use this product for any other purpose, or with doors that are outside the specifications of this manual.
- Do not disassemble or modify any parts other than those described in this document.




Caution: If not followed, injury or damage may result.




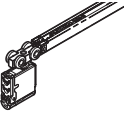

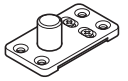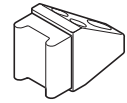
- Follow the specified dimensions, specifications, and alignment of the door and frame. Warping, tilting or twisting of the frame or door may cause failure.
- If cutting any parts, make sure to remove any burrs before installation. Also check the upper track for any left-over burrs or scraps and remove these.
- This product is a part for architectural fittings. After installation, please check the function and safety of the final product. Please inform the end user how to use the product safely.
- Make sure to check the screws for slack at regular intervals (one month from first usage, half a year, and then one time every year is recommended).
- Install the product with two people (in the case of one person, there is a risk of damaging components).

COMPONENT PARTS


No.	①	②	③	④	⑤	⑥	⑦
Name	Upper track	Soft closer (two-way)	Upper roller	Trigger (with nit)	Floor guide	Bumper block	Door stopper (floor)
Item No.	FD30-TRA	FD30SP-WRH-DSC	FD30SP-WRH-N	FD30-HATG	FD30-HBG	FD30-HBB	FD30-HTKY
Item	2100/2730mm Hole pitch: 300 mm Pitch end: 10 mm Accessory screw: Countersunk head tapping screw 4×40	 Accessory screw: Pan head tapping screw 3.5×30.....3 pcs	 Nut Accessory screw: Pan head tapping screw 3.5×30.....3 pcs		 Accessory screw: Countersunk head tapping screw 3.5×30.....4 pcs		 Accessory screw: Bind head tapping screw 4×30.....3 pcs
Single sliding	1 pc	1 pc	1 pc	2 pcs/set	1 pc	2 pcs	2 pcs

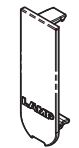No.	⑧	⑨	⑩
Name	Side cover	Stopper plate	Screw for stopper plate
Item No.	FD30-HASC		
Item			
Single sliding	Screws for stopper plate are attached to ⑧ above. (2 pcs/set)		
片引き	1 ea. (L/R)	2 pcs	4 pcs


OPTIONAL PARTS	⑪	⑫
	Cover cap FDSP-WRH-CP	Embedded Lower Guide Rail FD30-HBRT
	1000 - 1500 mm Hole pitch : 250 mm Pitch end : 30 mm Recommended screw: Countersunk head tapping screw 4 × 20	

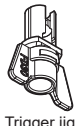ACCESSORY	⑬	⑭	⑮
	Spanner wrench FDSP-SP	Trigger FD25SP-30-TRG	Jig FD25SP-30-TRJ
			
	Trigger	Trigger jig	
The above parts are not used.			

INSTALLATION DRAWING (EXAMPLE)


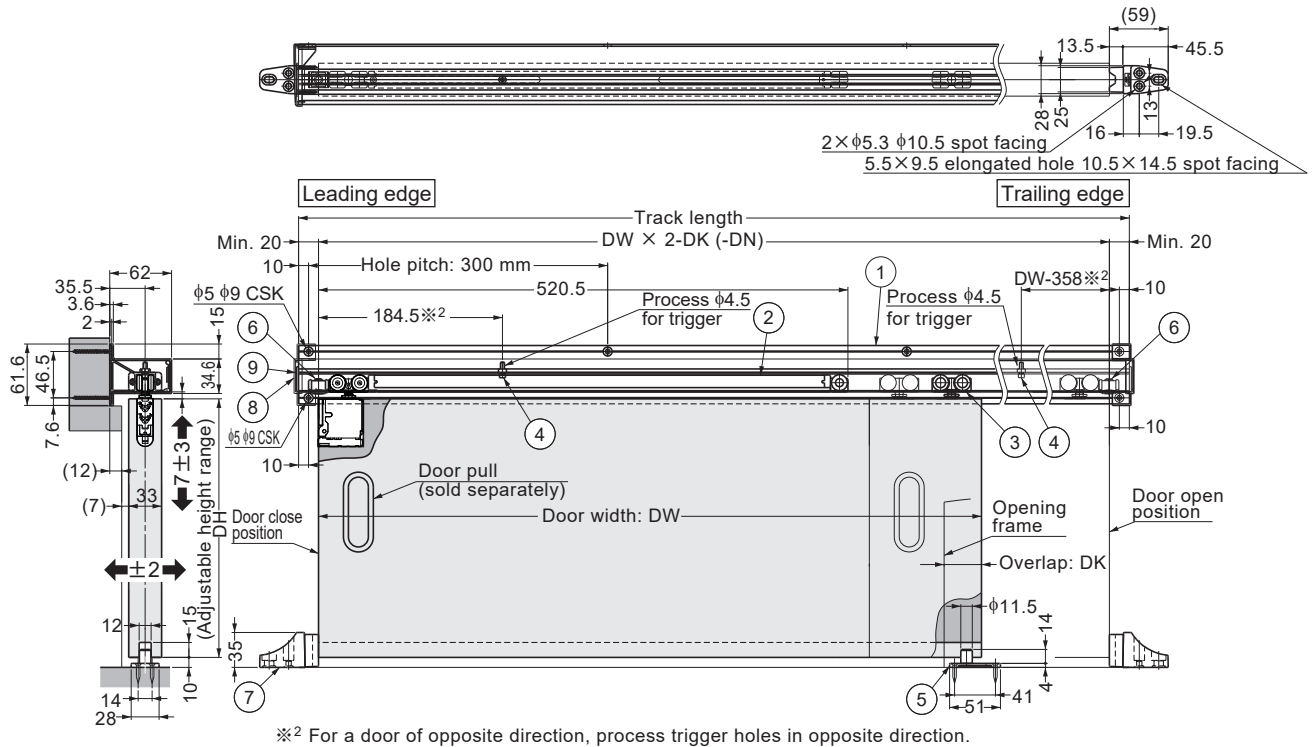


Door process dimensions

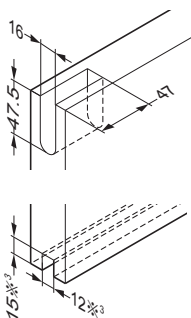

※³ When Cover cap ⑪ (option) is used.


※⁴ When using door guide track

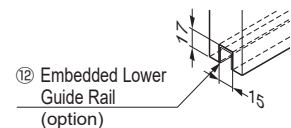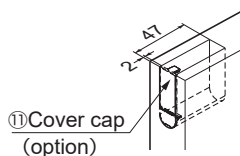


INSTALLATION PROCEDURE

1 Cutting and Hole Drilling on Upper Track

Cutting

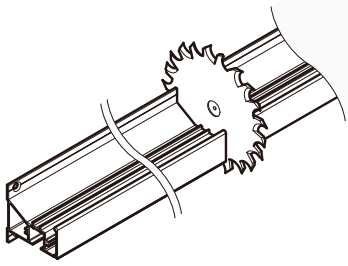


Hole processing


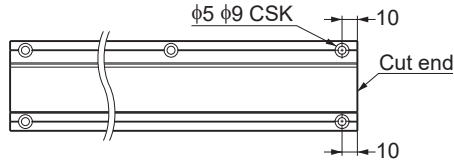


Processing holes for trigger

Caution
Take care of the direction of upper track (leading edge, trailing edge).

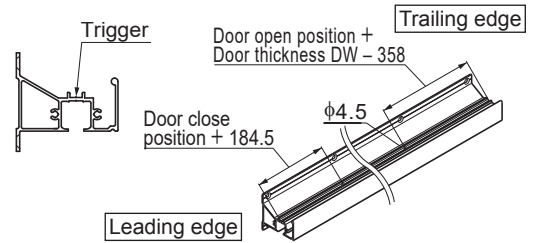

2 Mounting Parts on Door

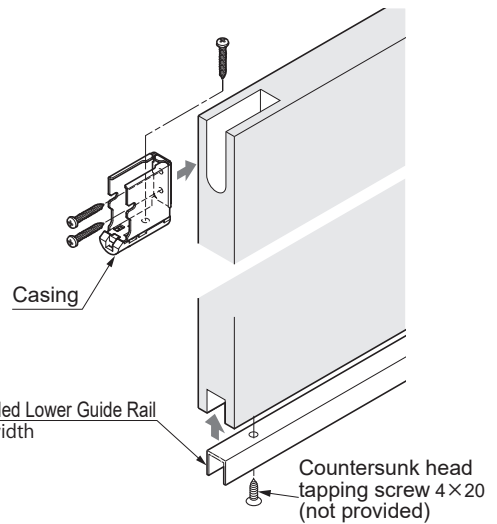
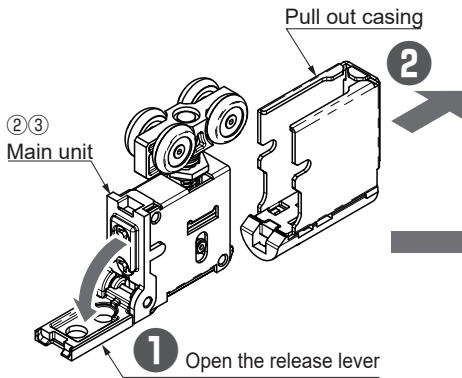


3 Verification Before Installing Soft Closer

Caution
Without verification the self closing feature may fail.



If the trigger position is wrong, pull back the trigger catcher to the correct position using a 6mm diameter round bar.

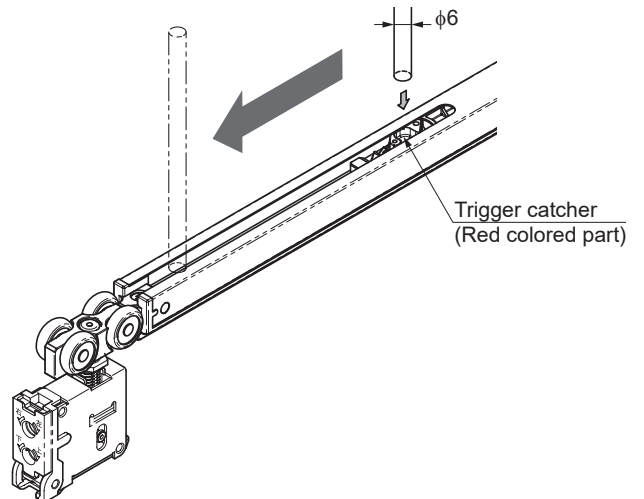
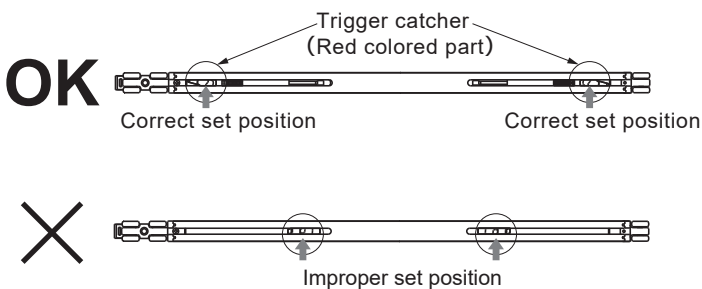


4 Inserting Parts into Upper Track

Insert the parts in order from ① to ④ with care of direction.

Caution
Remove any dirt or aluminum chips from the track.


Caution
Fasten bumper blocks temporarily to prevent the inserted parts from falling.

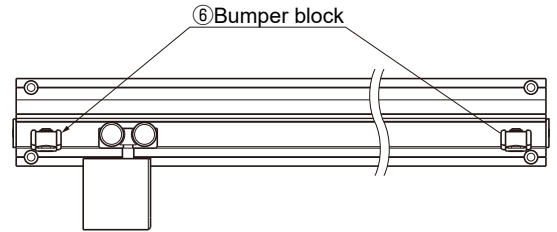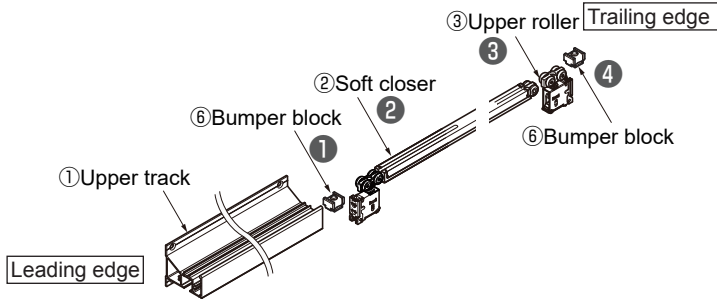

5 Mounting of Upper Track



Caution

- ❗ Be careful not to overtighten the screws and screw heads protruding on upper track.
- ⊘ It may cause deformation of track or damage of soft closer.

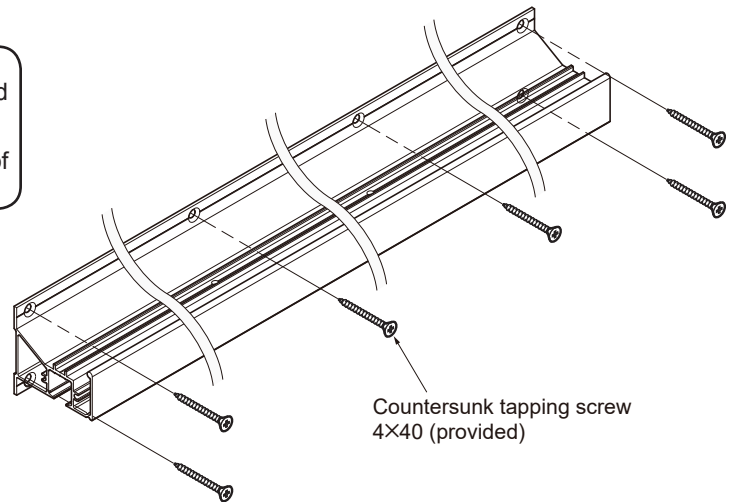


6 Fastening of Trigger

Fasten triggers to the hole made during procedure 1 with the provided nuts.

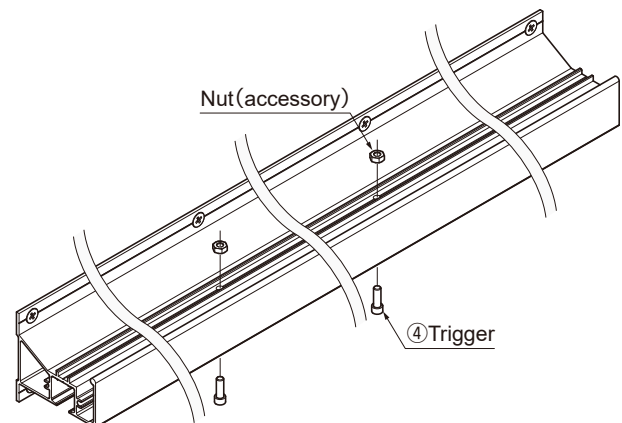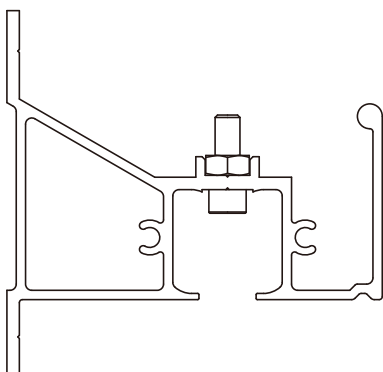


7 Assembly of Side Cover

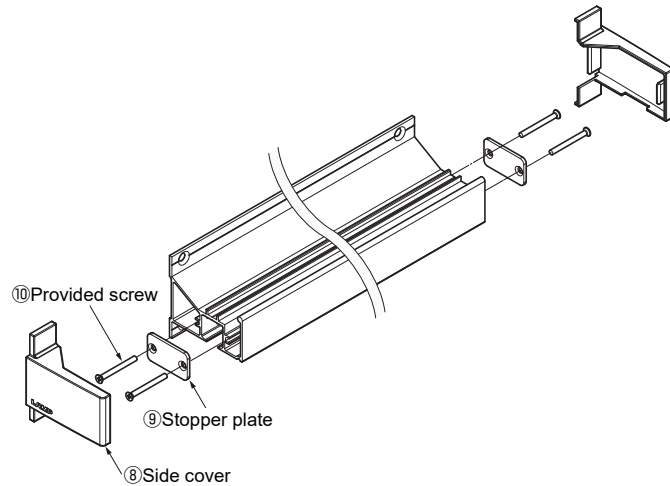


8 Mounting of Floor Guide


Position floor guide just below the center of the upper track.

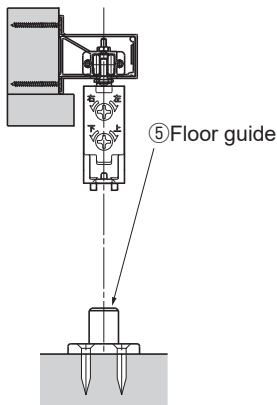

Position the floor guide so that its protruding part stays under the door when it is opened or closed.

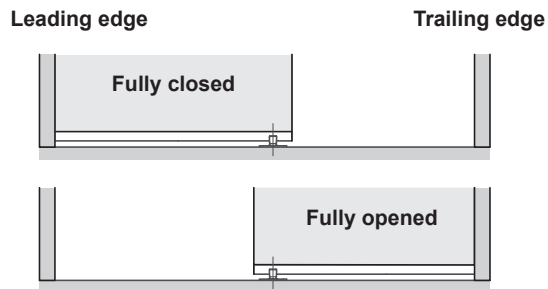


Fasten the four countersunk holes with provided screws.

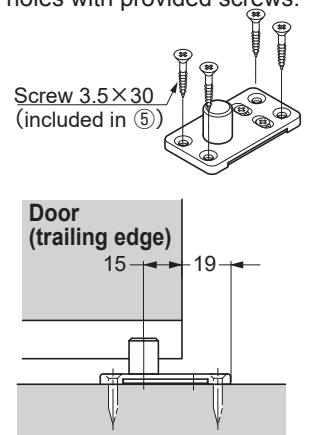


9 Hanging Door

- ① Place a 10 mm support under the door.
- ② While holding the door, place the groove under the door on the protruding part of the floor guide.

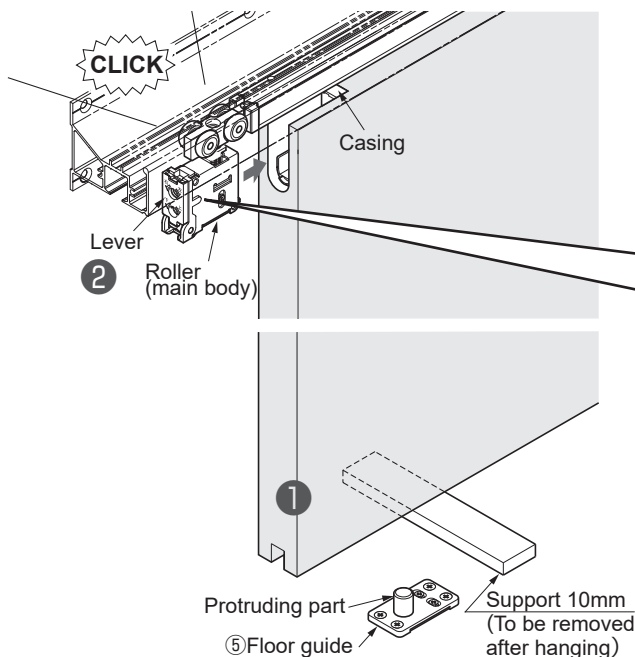

⚠ Caution

Verify that the main unit is not dislocated from the casing, for either of the door ends.

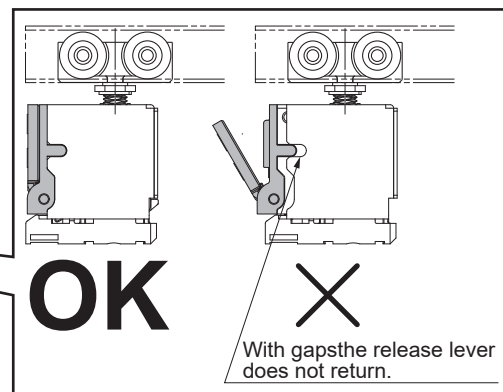


③ Verification of Soft Closer Operation

- Starting point of soft - close.
Leading edge : approx 100mm before closed position.
Trailing edge : approx 50mm before closed position.

10 Fastening of Bumper Block

Adjust position of bumper block in the track such that the door stops at the correct positions for both ends.

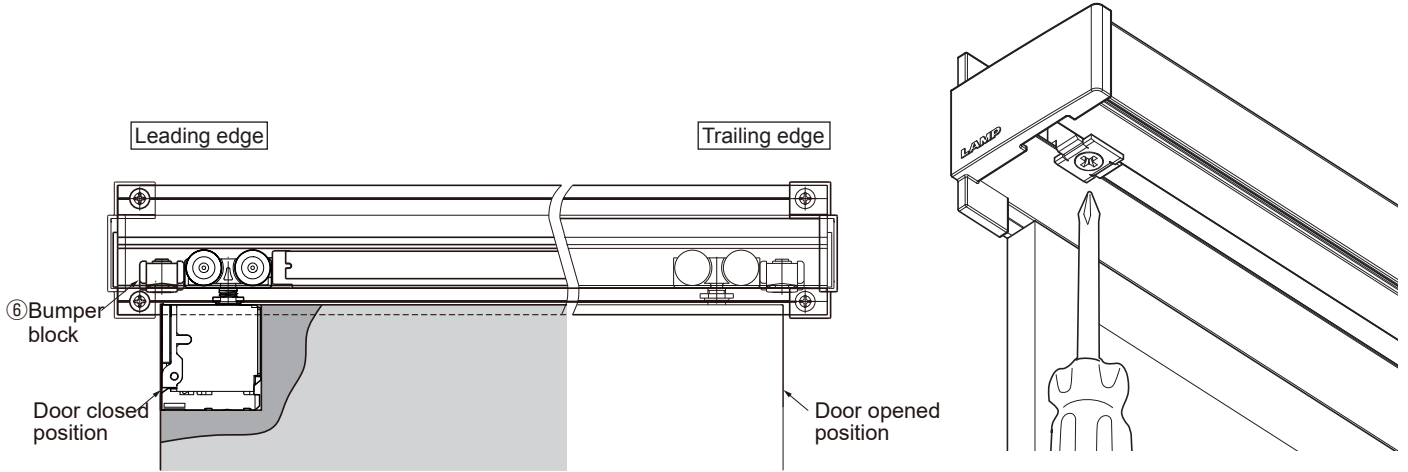

11 Adjusting the Door Position




Adjust the door parallel to the upper track with 7-13 mm of clearance between the door and floor.

Caution

❗ The adjustment of the door should be done with the jump prevention nut loosened.

⊘ Do not turn adjustment screw beyond adjustment range.


⊘ Do not use electric screw driver.

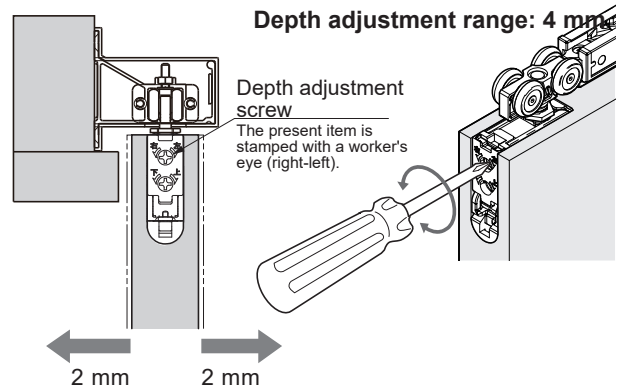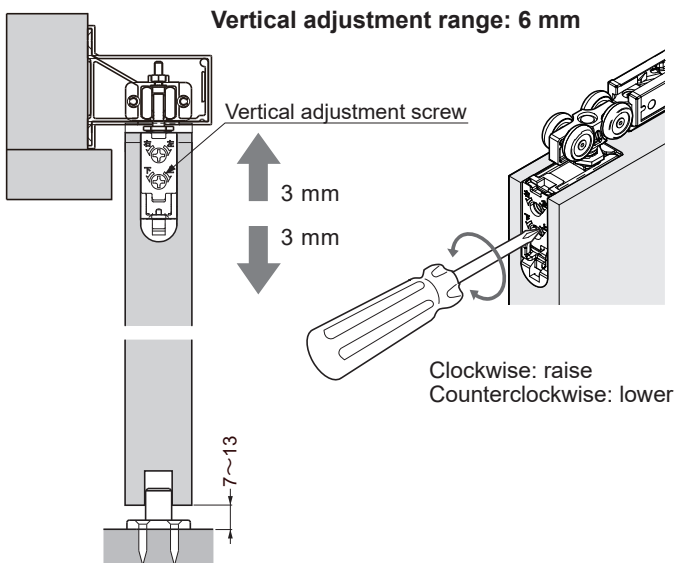

12 Adjusting the floor guide


If the door movement is not smooth, remove the door, then adjust the floor guide forwards or backwards.

Adjustment range : 4mm

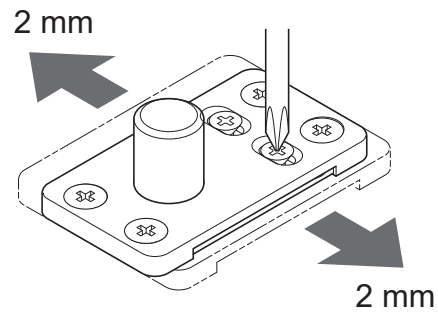


13 Fastening the Jump Prevention Nut

The jump prevention nut is on the hanger bolt of the upper roller. Tighten the nut with the provided spanner until it contacts the soft closer.

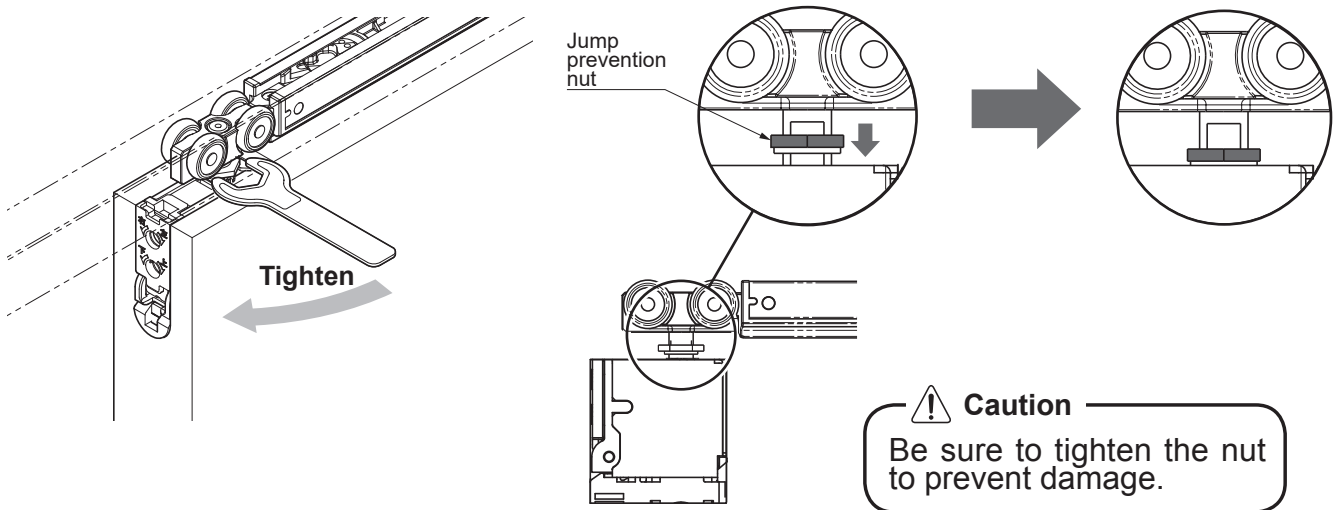

14 Mounting of door stopper (floor)


Fasten door stoppers at the positions where the door stops.

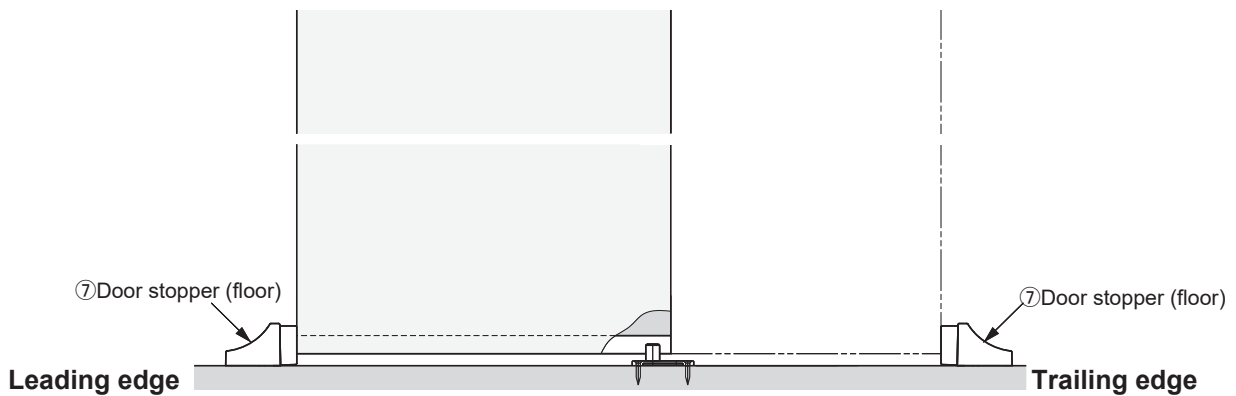

APPENDIX How to remove door

- Use a 10 mm support under the door.
- Then pull out the upper roller main unit from the door while lower the lever.
- If it is difficult to install or detach the roller, loosen the nut as shown in the illustration.
- It will be easier if you slide the hanger bolt with a spanner wrench.

Caution
Be careful not to let the door fall.

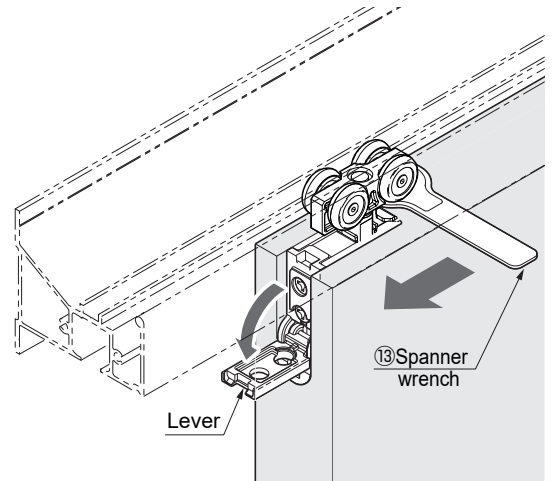

PERIODICAL INSPECTION

- Clean the inside of the track.
- Check the upper and lower space of the door. If necessary, correct the space.

TROUBLESHOOTING

Trouble	Check Point	Solution
Door stops during soft closing	Check if door bottom contacts the floor.	Verify that the track mounting screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 7 - 13 mm.
	Check if the upper track is set horizontally.	Using a level gauge, reset the upper track horizontally.
The door doesn't close softly	Check if mohair seal is installed.	Reduce the friction between the mohair seal and door.
	Check if trigger is installed.	Install trigger to specified position.
	Check if door is closed by excessive force.	Do not close door by excessive force as it may damage the soft closer.
Abnormal noise during operation	The position of the trigger catcher in page 3 section ■. [3] may become dislocated. (It is hidden as installed in upper track.)	Remove the door and the upper track, then check the status of the trigger catcher in section ■. [3] .
	Check if door bottom contacts the floor or floor guide.	Verify that the track mounting screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 7 - 13 mm.
	Check if door touches adjacent parts.	Adjust the door depth position to avoid contact with other objects or adjust the position of floor guide.
Heavy door operation	Check track rollers for aluminum dust.	Remove the track, then pull out and clean the roller.
	Check if door bottom contacts the floor or floor guide.	Verify that the track fixing screws are not loosened. Then, adjust the door height such that the clearance between the door bottom and floor is 7 - 13 mm.
Door starts to move.	Check if door touches adjacent parts.	Adjust the door depth position to avoid contact with other objects or adjust the position of floor guide.
	Check if the upper track is set horizontally.	Using a level gauge, reset the upper track horizontally.

SUGATSUNE KOGYO CO., LTD.
Tokyo, JAPAN
Phone: +81 3 3866 2260
E-mail: export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LIMITED
Reading, UK
Phone: +44 1189 272 955
E-mail: sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH
Düsseldorf, GERMANY
Phone: +49 211 53812 900
E-mail: sales@sugatsune.eu

SUGATSUNE AMERICA, INC.
California, USA
Phone: +1 310 329 6373
E-mail: sales@sugatsune.com

Chicago, USA
Phone: +1 630 317 7072
E-mail: sales@sugatsune.com

SUGATSUNE CANADA, INC.
Montreal, CANADA
Phone: +1 514 312 5267
E-mail: support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD.
Shanghai, CHINA
Phone: +86 21 3632 1858
E-mail: lamp@sugatsune.com.cn

Guangzhou, CHINA
Phone: +86 20 6639 3554
E-mail: lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD.
Incheon, KOREA
Phone: +82 32 220 0603
E-mail: sales@sugatsune-korea.co.kr

SUGATSUNE KOGYO INDIA PRIVATE LIMITED
Mumbai, INDIA
Phone: +91 9867299597
E-mail: sales@sugatsune.in
Delhi, INDIA
Phone: +91 9867299597
+91 11 45093636
E-mail: sales@sugatsune.in